



MONSIEUR TRICOT
STANDING LAMP

CONTENTS

Introduction	4	Maintenance	15
		Cleaning the cover	15
The story of Monsieur Tricot	4	Troubleshooting	18
Collection overview	5	Product overview standing lamps	
Safety instructions	7	wired	19
Intended use	8	Parts list	19
Disclaimer	8	Specifications	20
Recycling	8	Power source specifications	20
Compliance	9	Installation	21
Product overview standing lamps	11	Check the contents of the package	21
Parts list	11	Maintenance	23
		Cleaning the cover	23
Specifications	12	Notes	27
Installation	13		
Check the contents of the package	13		

INTRODUCTION

Congratulations on the purchase of your Monsieur Tricot lamp. Its warm glow and hand-crocheted or knitted fabric will cast beautiful shadows as a magical backdrop for long, cosy summer nights. The Monsieur Tricot hanging and standing lamps form a complete family of lights – you can read their story below.

This user manual contains all the necessary information for the correct, efficient and safe use of your lamp. We encourage you to read this information carefully before installing or using the product.

One lamp from the Monsieur Tricot collection has been used as an example to explain the instructions. It may be possible that your lamp looks slightly different.

THE STORY OF MONSIEUR TRICOT

Designer Ilia Eckardt grew up immersed in the Belgian fashion scene, his mother Hilde Frunt knitting prototypes for Belgian fashion designers such as Raf Simons, Ann Demeulemeester and Dries Van Noten. Fascinated by their world, Ilia worked on several knitting projects of his own, experimenting with innovative knitting techniques and materials.

Monsieur Tricot is his first creation, a family of in- and outdoor lamps, knitted or hand-crocheted with an innovative, weatherproof yarn. The sphere shaped lights give a warm glow and the different patterns cast beautiful shadows. The knitting and crocheting is done in Belgium by a network of artisans and every item is checked by Ilia and his mother.

As family is very important to the designer, he created his light objects as a family. Meet the handsome Monsieur Lebonnet, the graceful Madame Latoque, the chic Madame Cachet and their nephew Monsieur Ellipse.

COLLECTION OVERVIEW

COLOURS



10-Linen



30-Moss



60-Brick



89-Wengé

STANDING LAMPS

Monsieur Lebonnet



dia 30 cm
D080130S



dia 40 cm
D080140S



dia 60 cm
D080160S

Madame Latoque



dia 30 cm
D080230S



dia 40 cm
D080240S

Madame Cachet



dia 30 cm
D080330S



dia 40 cm
D080340S



dia 50 cm
D080350S

STANDING LAMPS WIRED

Monsieur Lebonnet



dia 30 cm
D080130SW



dia 40 cm
D080140SW



dia 60 cm
D080160SW

Madame Latoque



dia 30 cm
D080230SW



dia 40 cm
D080240SW

Madame Cachet



dia 30 cm
D080330SW



dia 40 cm
D080340SW



dia 50 cm
D080350SW

Monsieur Lebonnet



dia 30 cm
D080130H



dia 40 cm
D080140H



dia 60 cm
D080160H

Madame Latoque



dia 30 cm
D080230H



dia 40 cm
D080240H

Madame Cachet



dia 30 cm
D080330H



dia 40 cm
D080340H



dia 50 cm
D080350H

Monsieur Ellipse



dia 40 cm
D080440H

SAFETY INSTRUCTIONS

GENERAL

- ⚠ Only use the product as described in this manual.
- ⚠ Do not use a damaged product.
- ⚠ Do not drop the product, avoid bumping, and avoid impact with hard, pointy objects.
- ⚠ Do not use the product if a part is damaged or defective.
- ⚠ Replace a damaged or defective part immediately.
- ⚠ Do not tumble dry the removable cover.
- ⚠ Any changes made to the product can have consequences for safety, correct operation and warranty procedures.
- ⚠ Every lamp must be removed at least 2 meter horizontally and vertically from any type of heat source.
- ⚠ Do not submerge the product in water or any other liquid.
- ⚠ Do not unscrew the screws of the product and never open the product to avoid damage.

STANDING LAMPS

- ⚠ Permanent charging of the lamp drastically shortens the lifespan of the battery. Unplug the product every time the battery is fully charged.
- ⚠ Do not charge the product in an ambient temperature below 0°C (32°F) and above 45°C (113°F).
- ⚠ When used on marine vehicles, always charge the lamp below deck and close the USB cover cap before placing the product back on deck.
- ⚠ Do not incinerate the battery of the product. Battery disposal should be comply local regulations for disposal of hazardous materials.

STANDING LAMPS WIRED

- ⚠ Keep the power source away from water sources.
- ⚠ The power cable can be placed underground if a protective sheath that provides extra protection is provided.

INTENDED USE

The product is only intended as indoor or outdoor LED lighting. Any change to the product can have consequences for safety, warranty and correct operation.

DISCLAIMER

Designs and specifications are subject to change without notice. All logos, brands and product names are trademarks or registered trademarks of their respective owners and are hereby recognised as such.

RECYCLING

Our products are packaged in environmentally friendly materials that can be recycled, disposed of or destroyed without endangering the environment.



This symbol indicates that a product should not be thrown away with other household waste throughout the EU to prevent possible harm to the environment or human health by uncontrolled waste disposal. You are responsible for recycling in order to promote the sustainable reuse of raw materials.

COMPLIANCE



Monsieur Tricot complies with Low Voltage, EMC, Ecodesign and RoHS directives.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device must not cause harmful interference, and (2) the user must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit from the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with the FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance of 20cm between the source of interference (in this case Bluetooth) and your body.


WARNING IC

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:


- (1) This device must not cause interference; and
- (2) This user must accept any interference, including interference that may cause undesired operation of the device.

To maintain compliance with RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the lamp and your body.

 
Standing lamps
Monsieur Tricot

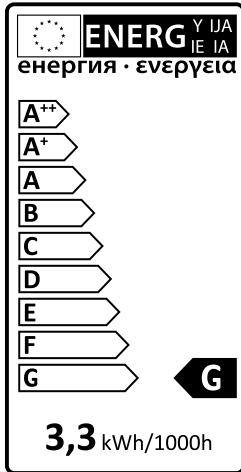

Standing lamps Wired
Monsieur Tricot

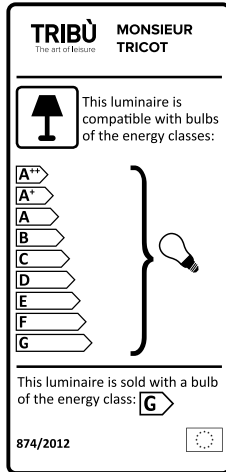 

PRODUCT OVERVIEW STANDING LAMPS

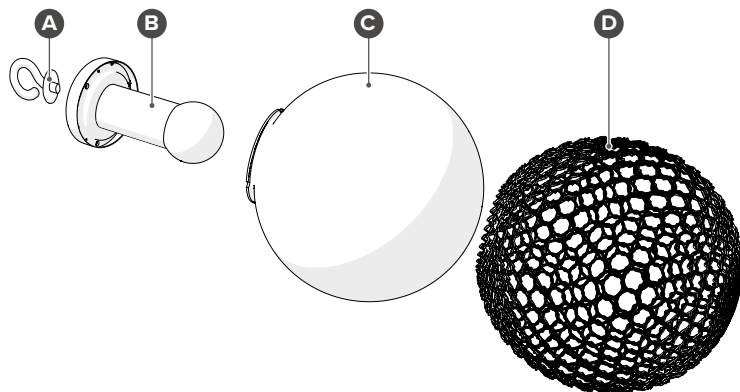 

PARTS LIST

- A** Hook
- B** Base
- C** Sphere
- D** Removable cover

SPECIFICATIONS

Power	2.5W
Light source	LED lamp (non-replaceable)
Voltage	5V2A
Wattage	2.5W-3W
Light source lifetime	30.000 hrs
On/off cycles	10.000
Starting time	Within 1 second
Warm-up time to 60% of the full light output	Immediate full light output
Light source dimensions	178 x 85 mm
Luminous flux	190 Lumen
Luminous efficacy	80 Lumen/Watt
Lumen maintenance	95% 3600H
Colour rendering index	Ra.80
Energy class	G
Battery	Rechargeable battery, up to 12 hrs operational at 100%
Charging time	4 hrs
Ambient temperature	0°C to +45°C (32°F to 113°F) during charging
	-20°C to +60°C (-4°F to 140°F) during use
Control	Button
Dimming	Gradual in 3 settings with the button

 
INSTALLATION

CHECK THE CONTENTS OF THE PACKAGE

Check if all parts from the parts list are present and that no damage is visible on the parts. If parts are missing or damaged, please contact your local Tribù dealer.

CHARGING THE LED LIGHT


1. Install a plug type on the adapter that matches your wall socket.

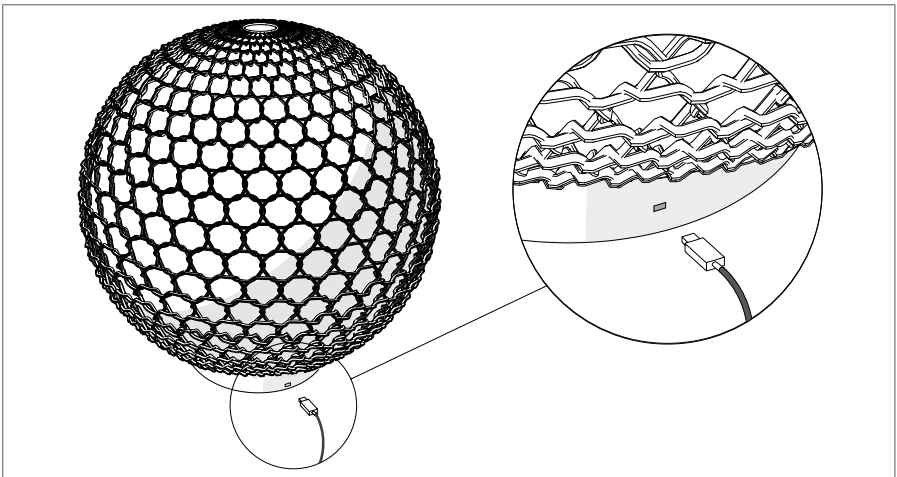

2. Connect the adapter to a wall socket and the lamp.
 - ⚠ The lamp has a USB C port. Do not connect any other USB types, this will damage the lamp.
 - ⚠ The lamp blinks twice to confirm that the power source is plugged into the power socket.
3. Charge the battery for at least 4 hours.
 - ⚠ The battery is fully charged when the red LED light next to the LED filaments is off.


OPERATING THE LAMP WITH THE BUTTON

 1. Every Monsieur Tricot standing lamp has a physical button on the base.
2. When pressing the button you can toggle between different levels of brightness.
 - 33% brightness
 - 66% brightness
 - 100% brightness
 - 0% brightness (OFF)

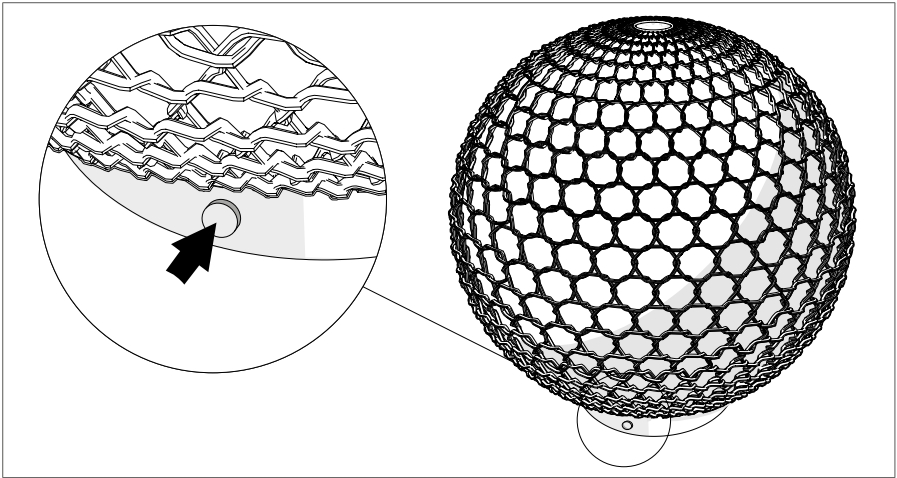


MAINTENANCE

 CLEANING THE COVER

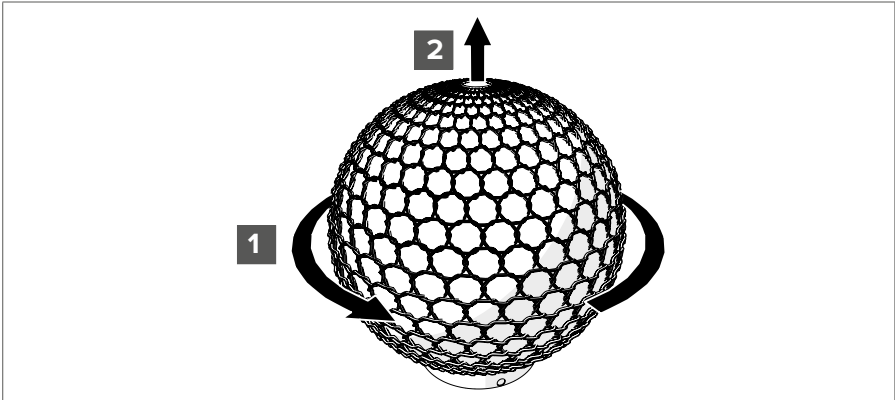


⚠ Always switch off the power before starting installation or maintenance work.

 
1. Turn the sphere clockwise until it is free of the bayonet catch.
2. Remove the sphere.

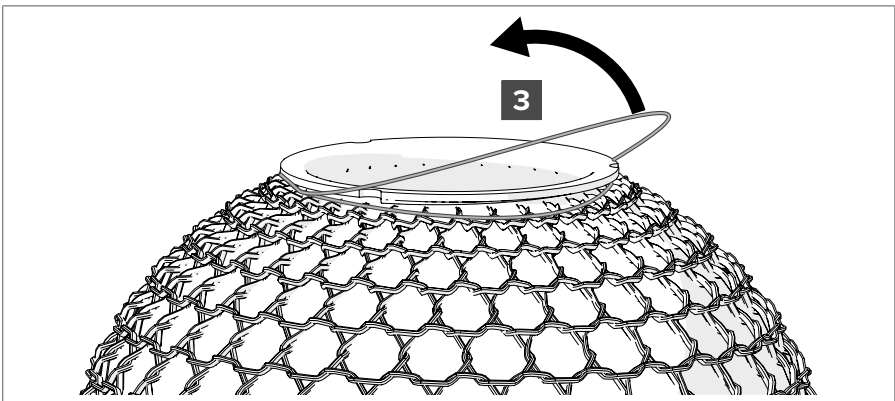

 
3. Loosen the elastic band of the removable cover.

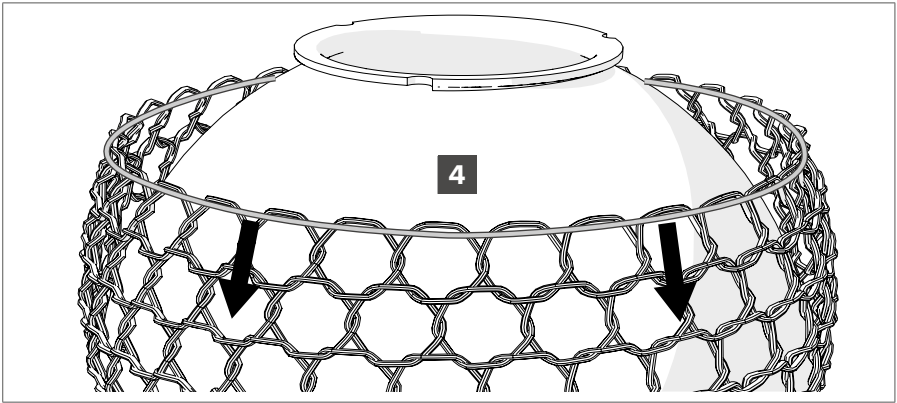

 
4. Pull the cover off the sphere.
5. Wash at 40°C (104°F) with a pH-neutral washing agent.
- ⚠ Do not tumble dry the cover.
6. Use a clean, microfibre cloth, lukewarm/warm water and a pH-neutral washing agent to clean the sphere.

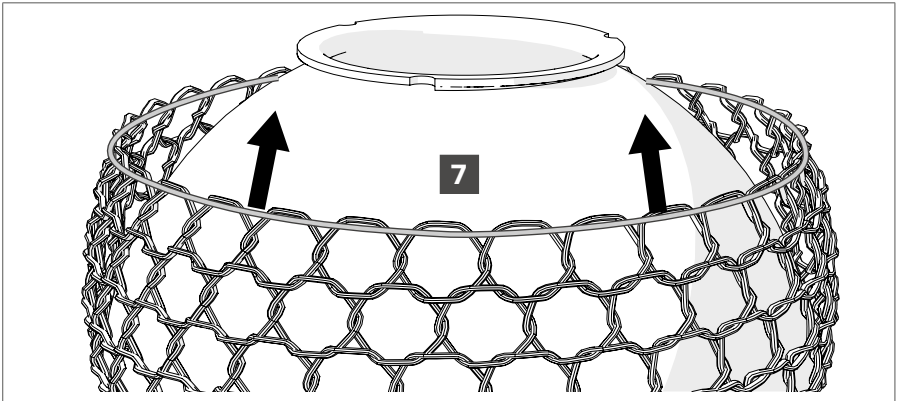

 
7. Pull the cover back over the sphere.

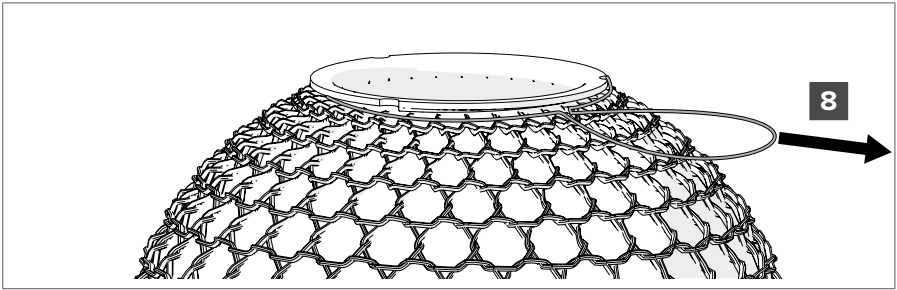

 8. Tighten the elastic band to create a loop.

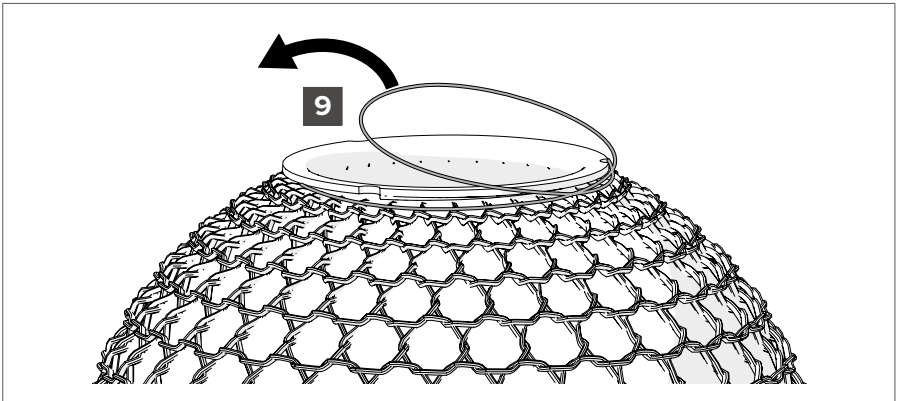

 9. Twist and pull the loop over the rim of the sphere.

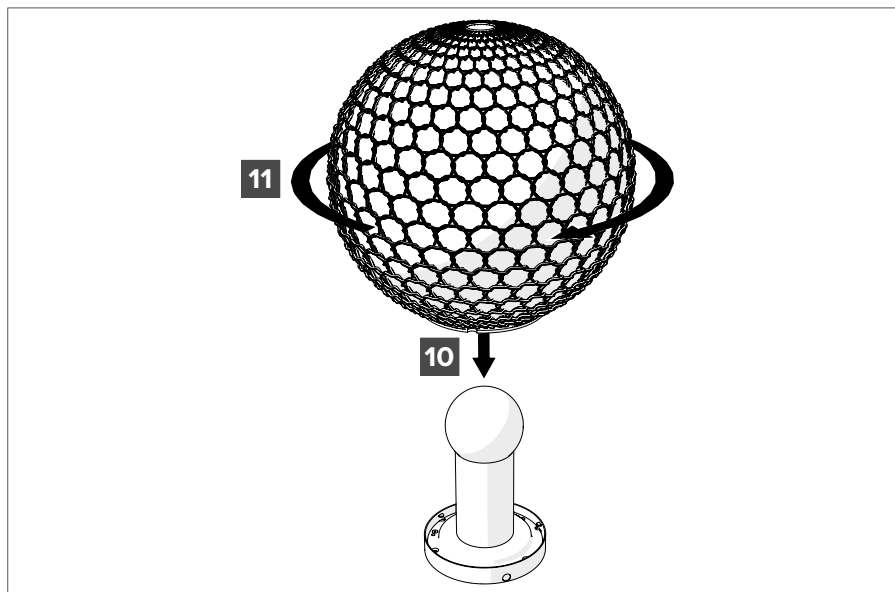


10. Place the sphere in the bayonet catch.
11. Turn the sphere counterclockwise until it is secure.
12. Switch on the power and test whether the lamp is functioning properly.

TROUBLESHOOTING

Reset the lamp by holding the on/off button for 15 seconds.

The lamp will blink to confirm a successful reset.

 PRODUCT OVERVIEW STANDING LAMPS WIRED

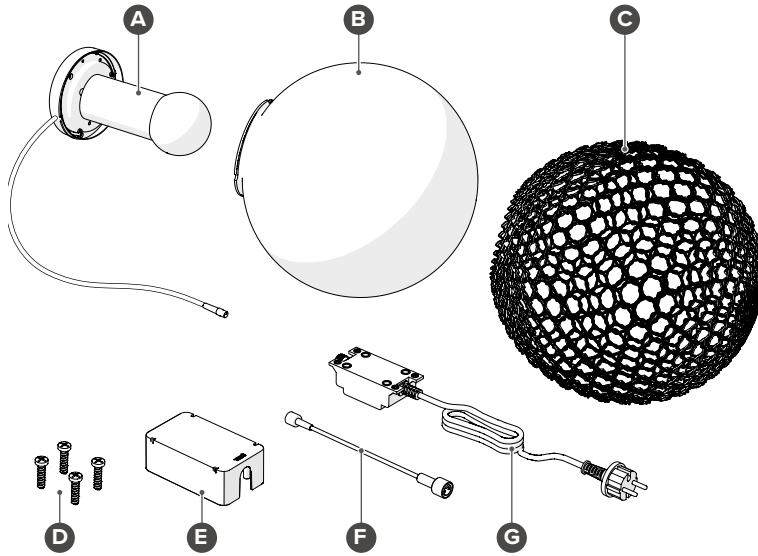

PARTS LIST

- | | | | |
|----------|-------------------------|----------|---------------------------------|
| A | Base | E | Protective cover power source |
| B | Sphere | F | Extension cord for power source |
| C | Removable cover | G | Power source with plug |
| D | Protective cover screws | | |

SPECIFICATIONS

Power	2.5W
Light source	LED lamp (non-replaceable)
Voltage	9-12.6V
Wattage	2.5W-3W
Light source lifetime	30.000 hrs
On/off cycles	10.000
Starting time	Within 1 second
Warm-up time to 60% of the full light output	Immediate full light output
Light source dimensions	178 x 85 mm
Luminous flux	166-200 Lumen
Luminous efficacy	74.6 Lumen/Watt
Lumen maintenance	95% 3600H
Colour rendering index	Ra.80
Energy class	G
Control	Button
Dimming	Gradual in 3 settings with the button

POWER SOURCE SPECIFICATIONS

Input voltage	230V : 12V/1A
Wattage	12W
Cable length	5m
IP classification	IP65

 
INSTALLATION

CHECK THE CONTENTS OF THE PACKAGE

Check if all parts from the parts list are present and that no damage is visible on the parts. If parts are missing or damaged, please contact your local Tribù dealer.

CONNECTING THE LED LIGHT


1. Install a plug type on the adapter that matches your wall socket.

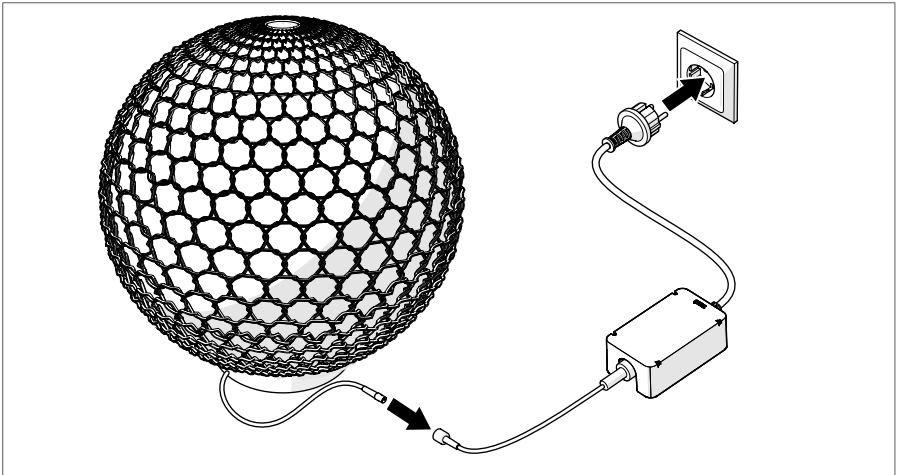

2. Connect the adapter to a wall socket and the lamp.


OPERATING THE LAMP WITH THE BUTTON

 1. Every Monsieur Tricot standing lamp has a physical button on the base.
2. When pressing the button you can toggle between different levels of brightness.
 - 33% brightness
 - 66% brightness
 - 100% brightness
 - 0% brightness (OFF)

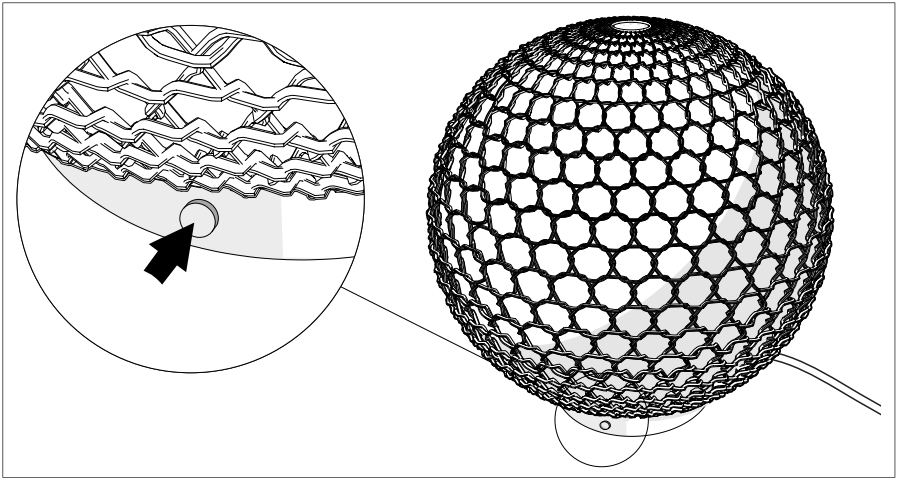


MAINTENANCE

 CLEANING THE COVER

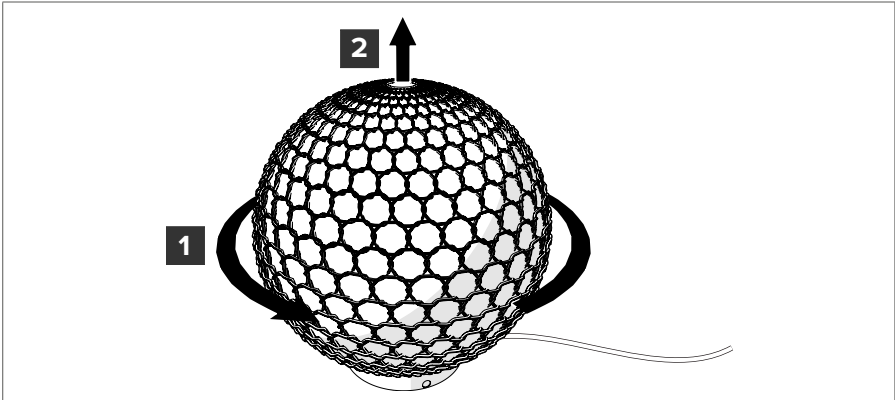


⚠ Always switch off the power before starting installation or maintenance work.

 
1. Turn the sphere clockwise until it is free of the bayonet catch.
2. Remove the sphere.

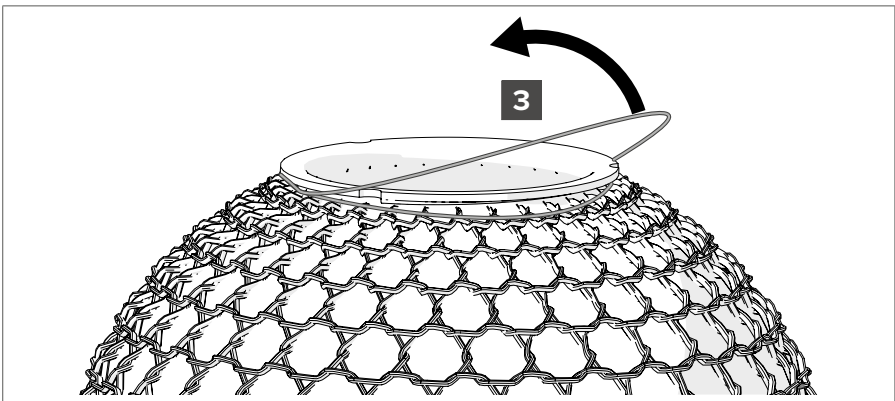

 
3. Loosen the elastic band of the removable cover.

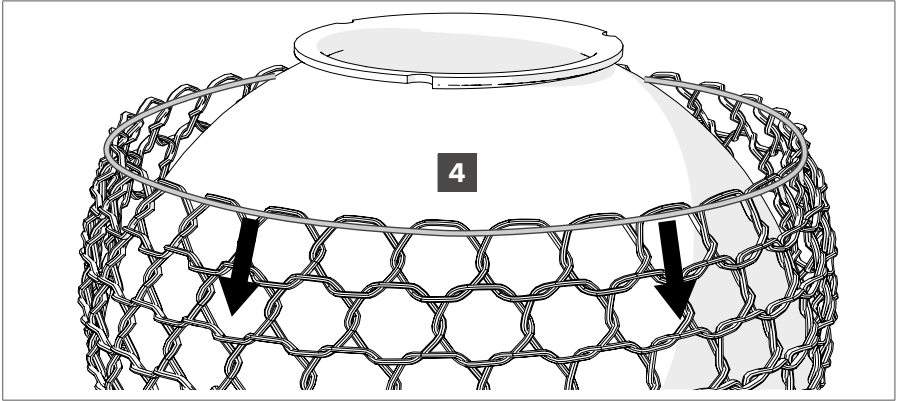

 
4. Pull the cover off the sphere.
5. Wash at 40°C (104°F) with a pH-neutral washing agent.
- ⚠ Do not tumble dry the cover.
6. Use a clean, microfibre cloth, lukewarm/warm water and a pH-neutral washing agent to clean the sphere.

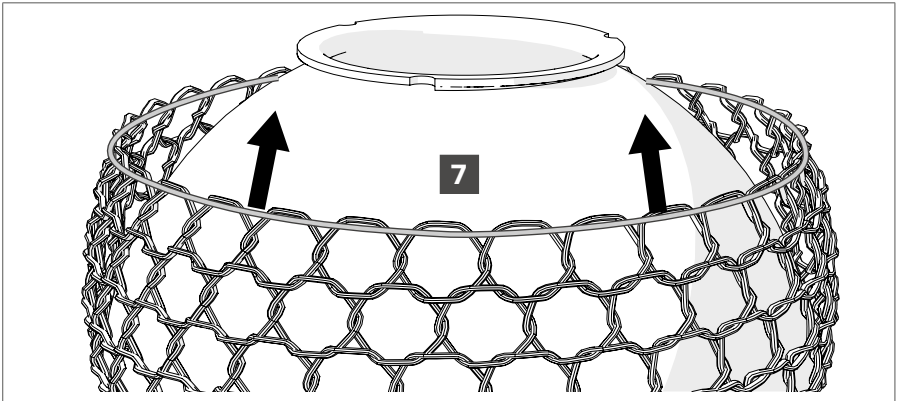

 
7. Pull the cover back over the sphere.

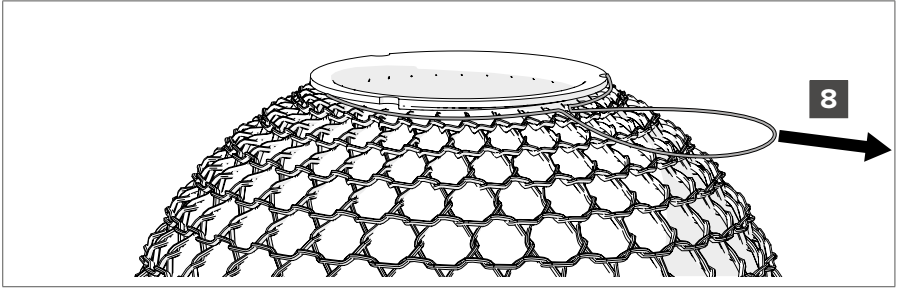

 8. Tighten the elastic band to create a loop.

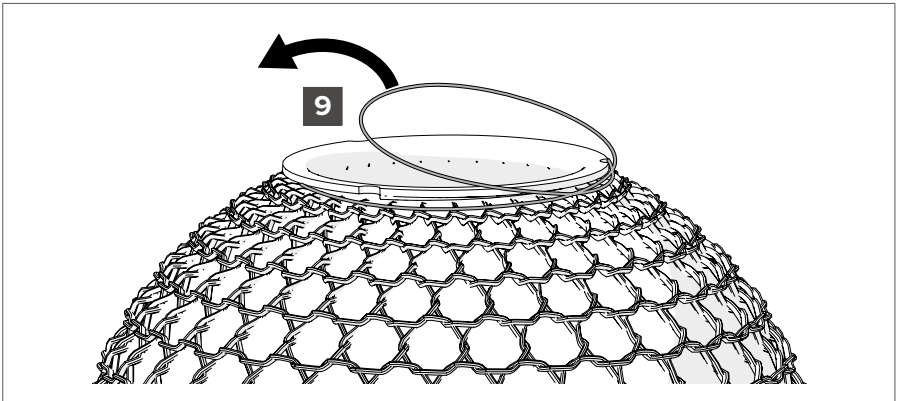

 9. Twist and pull the loop over the rim of the sphere.

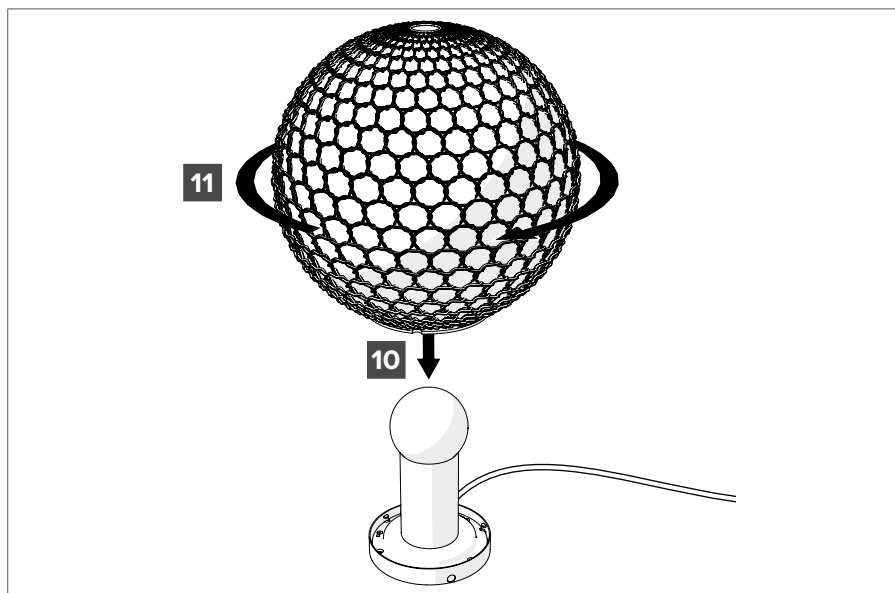

10. Place the sphere in the bayonet catch.
11. Turn the sphere counterclockwise until it is secure.
12. Switch on the power and test whether the lamp is functioning properly.

NOTES



Produced by:

TRIBÙ

Oude Heidestraat 72

3740 Bilzen

Belgium

www.tribu.com