



MONSIEUR TRICOT  
STANDING LAMP WIRED



# CONTENTS

---

<b>Contents</b>	<b>3</b>	<b>Product overview standing lamps</b>	
		<b>wired</b>	<b>11</b>
<b>Introduction</b>	<b>4</b>	Parts list	11
<b>The story of Monsieur Tricot</b>	<b>4</b>	<b>Specifications</b>	<b>12</b>
		Power source specifications	12
<b>Collection overview</b>	<b>5</b>	<b>Installation</b>	<b>13</b>
<b>Safety instructions</b>	<b>7</b>	Check the contents of the package	13
		Connecting the LED light	13
<b>Intended use</b>	<b>8</b>	Operating the lamp with the button	14
<b>Disclaimer</b>	<b>8</b>	<b>Maintenance</b>	<b>15</b>
		Cleaning the cover	15
<b>Recycling</b>	<b>8</b>	<b>Notes</b>	<b>19</b>
<b>Compliance</b>	<b>9</b>		

## INTRODUCTION

---

Congratulations on the purchase of your Monsieur Tricot lamp. Its warm glow and hand-crocheted or knitted fabric will cast beautiful shadows as a magical backdrop for long, cosy summer nights. The Monsieur Tricot hanging and standing lamps form a complete family of lights – you can read their story below.

This user manual contains all the necessary information for the correct, efficient and safe use of your lamp. We encourage you to read this information carefully before installing or using the product.

One lamp from the Monsieur Tricot collection has been used as an example to explain the instructions. It may be possible that your lamp looks slightly different.

## THE STORY OF MONSIEUR TRICOT

---

 
Designer Ilia Eckardt grew up immersed in the Belgian fashion scene, his mother Hilde Frunt knitting prototypes for Belgian fashion designers such as Raf Simons, Ann Demeulemeester and Dries Van Noten. Fascinated by their world, Ilia worked on several knitting projects of his own, experimenting with innovative knitting techniques and materials.

Monsieur Tricot is his first creation, a family of in- and outdoor lamps, knitted or hand-crocheted with an innovative, weatherproof yarn. The sphere shaped lights give a warm glow and the different patterns cast beautiful shadows. The knitting and crocheting is done in Belgium by a network of artisans and every item is checked by Ilia and his mother.

As family is very important to the designer, he created his light objects as a family. Meet the handsome Monsieur Lebonnet, the graceful Madame Latoque, the chic Madame Cachet and their nephew Monsieur Ellipse.

# COLLECTION OVERVIEW

COLORS

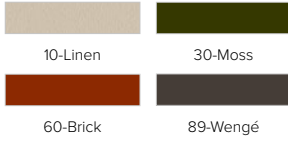

STANDING LAMPS WIRED

## Monsieur Lebonnet



dia 30 cm  
D080130SW



dia 40 cm  
D080140SW



dia 60 cm  
D080160SW

## Madame Latoque



dia 30 cm  
D080230SW



dia 40 cm  
D080240SW

## Madame Cachet



dia 30 cm  
D080330SW



dia 40 cm  
D080340SW



dia 50 cm  
D080350SW

STANDING LAMPS

## Monsieur Lebonnet



dia 30 cm  
D081130S



dia 40 cm  
D081140S



dia 60 cm  
D081160S

## Madame Latoque



dia 30 cm  
D081230S



dia 40 cm  
D081240S

## Madame Cachet



dia 30 cm  
D081330S



dia 40 cm  
D081340S



dia 50 cm  
D081350S

**Monsieur Lebonnet**



dia 30 cm  
D080130H



dia 40 cm  
D080140H



dia 60 cm  
D080160H

**Madame Latoque**



dia 30 cm  
D080230H



dia 40 cm  
D080240H

**Madame Cachet**



dia 30 cm  
D080330H



dia 40 cm  
D080340H



dia 50 cm  
D080350H

**Monsieur Ellipse**



dia 40 cm  
D080440H

# SAFETY INSTRUCTIONS

---

## GENERAL

- ⚠ Only use the product as described in this manual.
- ⚠ Do not use a damaged product.
- ⚠ Do not drop the product, avoid bumping, and avoid impact with hard, pointy objects.
- ⚠ Do not use the product if a part is damaged or defective.  
Replace a damaged or defective part immediately
- ⚠ Do not tumble dry the removable cover.
- ⚠ Any changes made to the product can have consequences for safety, correct operation and warranty procedures.
- ⚠ Every lamp must be removed at least 2 meter horizontally and vertically from any type of heat source.
- ⚠ Do not submerge the product in water or any other liquid.
- ⚠ Do not unscrew the screws of the product and never open the product to avoid damage.

## STANDING LAMPS WIRED

- ⚠ Keep the power source away from water sources.
- ⚠ The power cable can be placed underground if a protective sheath that provides extra protection is provided.

## INTENDED USE

---

The product is only intended as indoor or outdoor LED lighting. Any change to the product can have consequences for safety, warranty and correct operation.

## DISCLAIMER

---

Designs and specifications are subject to change without notice. All logos, brands and product names are trademarks or registered trademarks of their respective owners and are hereby recognised as such

## RECYCLING

---

Our products are packaged in environmentally friendly materials that can be recycled, disposed of or destroyed without endangering the environment.



This symbol indicates that a product should not be thrown away with other household waste throughout the EU to prevent possible harm to the environment or human health by uncontrolled waste disposal. You are responsible for recycling in order to promote the sustainable reuse of raw materials.



## COMPLIANCE

---



Monsieur Tricot complies with Low Voltage, EMC, Ecodesign and RoHS directives.

### FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device must not cause harmful interference, and (2) the user must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit from the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with the FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm between the source of interference (in this case Bluetooth) and your body.

## WARNING IC

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device must not cause interference; and
- (2) This user must accept any interference, including interference that may cause undesired operation of the device.

To maintain compliance with RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the lamp and your body.

 
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Pour maintenir la conformité aux directives d'exposition aux radiofréquences, cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.


Standing lamp Wired

Monsieur Tricot

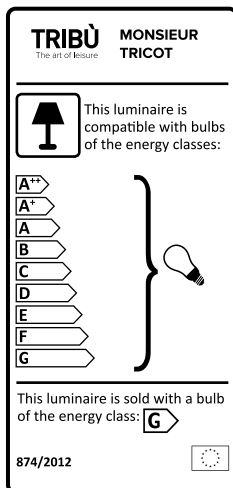

# PRODUCT OVERVIEW STANDING LAMPS WIRED

 ---

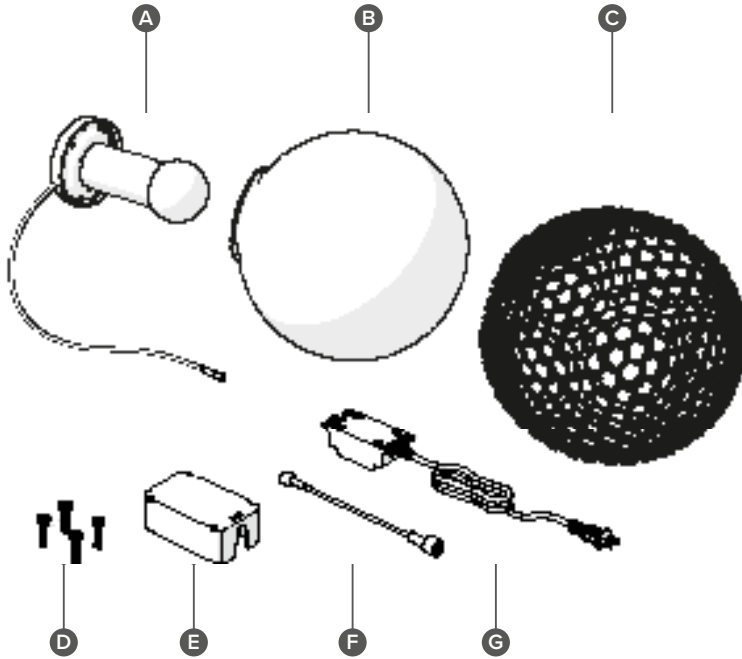

## PARTS LIST

- |          |                         |          |                                 |
|----------|-------------------------|----------|---------------------------------|
| <b>A</b> | Base                    | <b>E</b> | Protective cover power source   |
| <b>B</b> | Sphere                  | <b>F</b> | Extension cord for power source |
| <b>C</b> | Removeable cover        | <b>G</b> | Power source with plug          |
| <b>D</b> | Protective cover screws |          |                                 |

## SPECIFICATIONS

<b>Power</b>	2.5W
<b>Light source</b>	LED lamp (non-replaceable)
<b>Voltage</b>	9-12.6V
<b>Wattage</b>	2.5W-3W
<b>Light source lifetime</b>	30.000 hrs
<b>On/off cycles</b>	≥ 10.000
<b>Starting time</b>	Within 1 second
<b>Warm-up time to 60% of the full light output</b>	Immediate full light output
<b>Light source dimensions</b>	178 x 85 mm
<b>Luminous flux</b>	166-200 Lumen
<b>Luminous efficacy</b>	74.6 Lumen/Watt
<b>Lumen maintenance</b>	96 % 3600H
<b>Colour rendering index</b>	Ra.80
<b>Energy class</b>	G
<b>Control</b>	Button
<b>Dimming</b>	Gradual in 3 settings with the button

## POWER SOURCE SPECIFICATIONS

<b>Input voltage</b>	230V : 12V/1A
<b>Wattage</b>	12W
<b>Cable length</b>	5m
<b>IP classification</b>	IP65

# INSTALLATION

 
---

## CHECK THE CONTENTS OF THE PACKAGE

Check if all parts from the parts list are present and that no damage is visible on the parts. If parts are missing or damaged, please contact your local Tribù dealer.

## CONNECTING THE LED LIGHT

1. Install a plug type on the adapter that matches your wall socket.

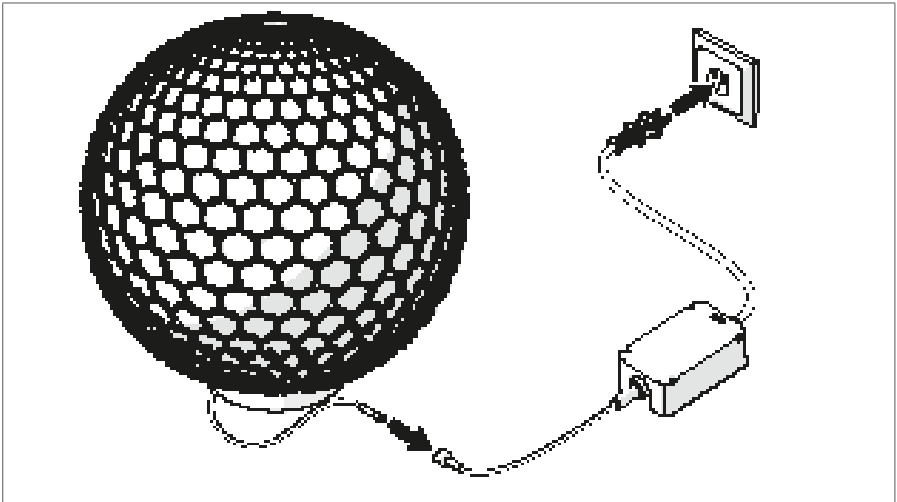


2. Connect the adapter to a wall socket and the lamp.

Optional: Unscrew the power source housing to attach the power source to a surface.

- ⚠ Never attach the power source in a location where it could become submerged in water.

## OPERATING THE LAMP WITH THE BUTTON

 
1. Every Monsieur Tricot standing lamp has a physical button on the base.
2. When pressing the button you can toggle between different levels of brightness.
  - 33 % brightness
  - 66 % brightness
  - 100 % brightness
  - 0 % brightness (OFF)

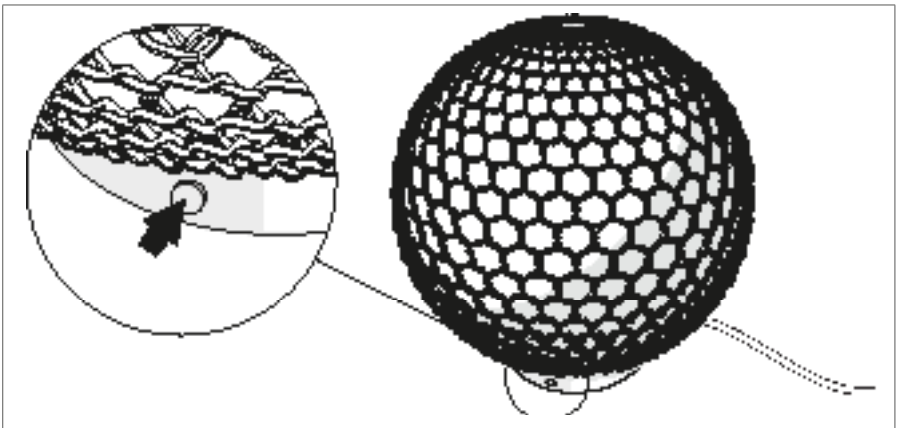


## MAINTENANCE

---

 
### CLEANING THE COVER

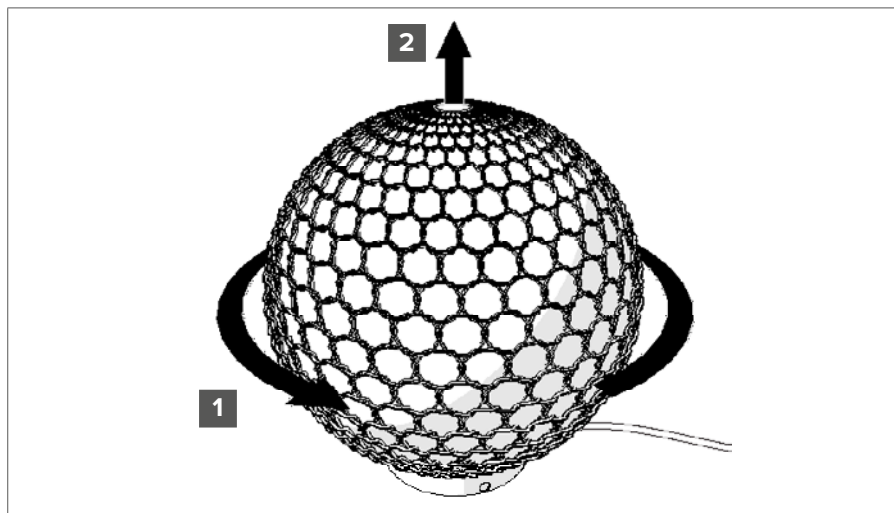

 
1. Turn the sphere clockwise until it is free of the bayonet catch.
2. Remove the sphere.

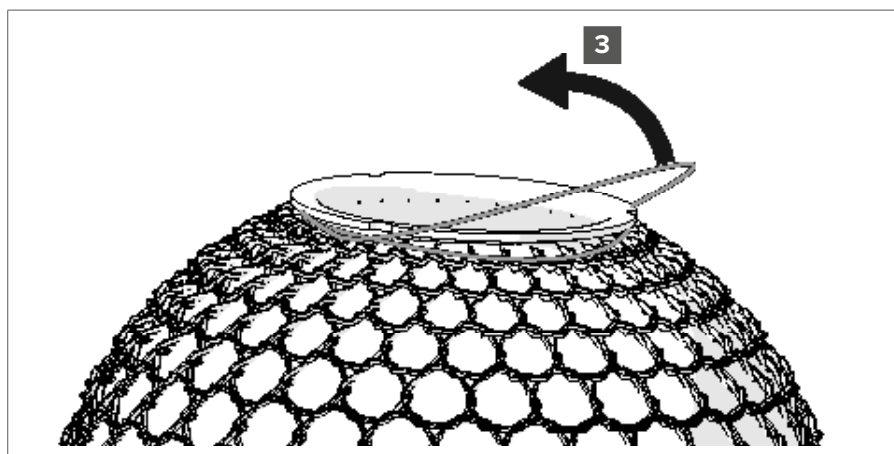

 3. Loosen the elastic band of the removable cover.

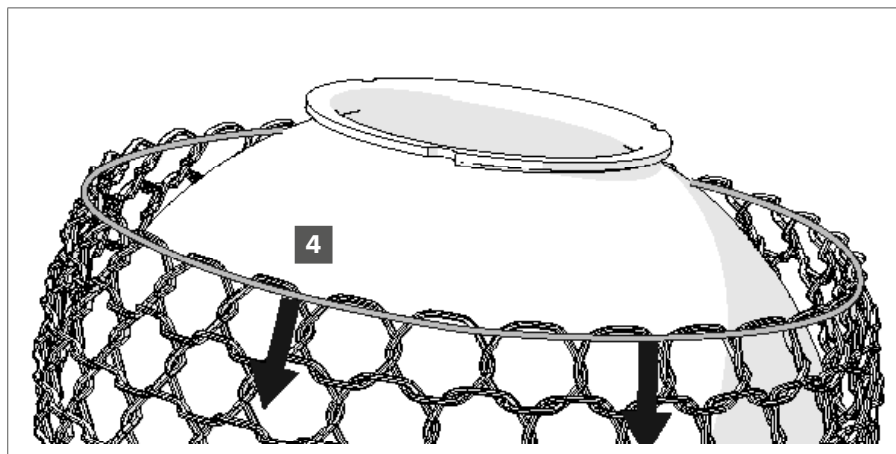


 4. Pull the cover off the sphere.
5. Wash at 40°C (104°F) with a pH-neutral washing agent.
- ⚠ Do not tumble dry the cover.
6. Use a clean, microfibre cloth, lukewarm/warm water and a pH-neutral washing agent to clean the sphere.

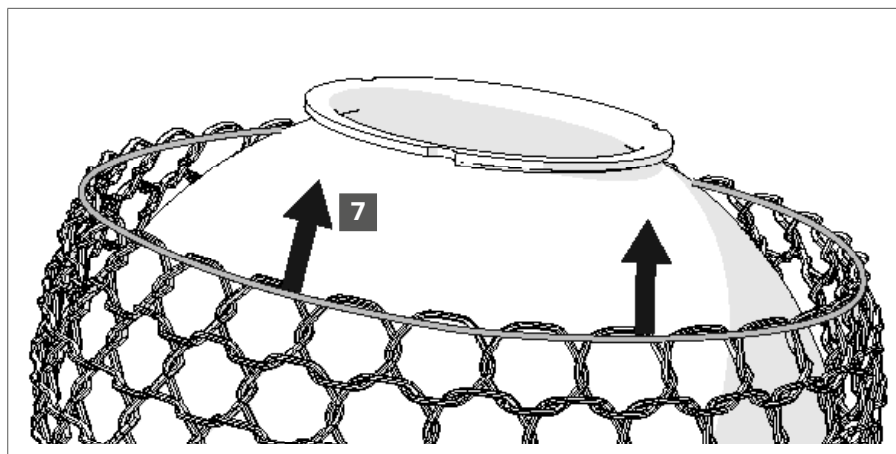


 7. Pull the cover back over the sphere.




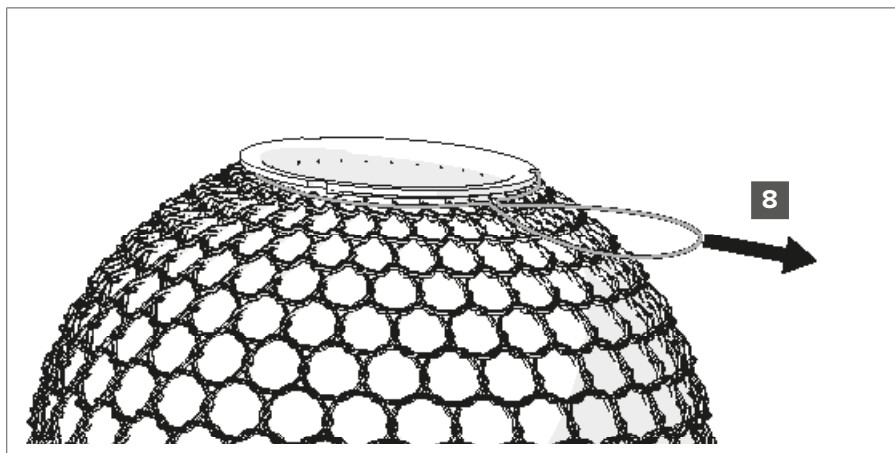

 8. Tighten the elastic band to create a loop.

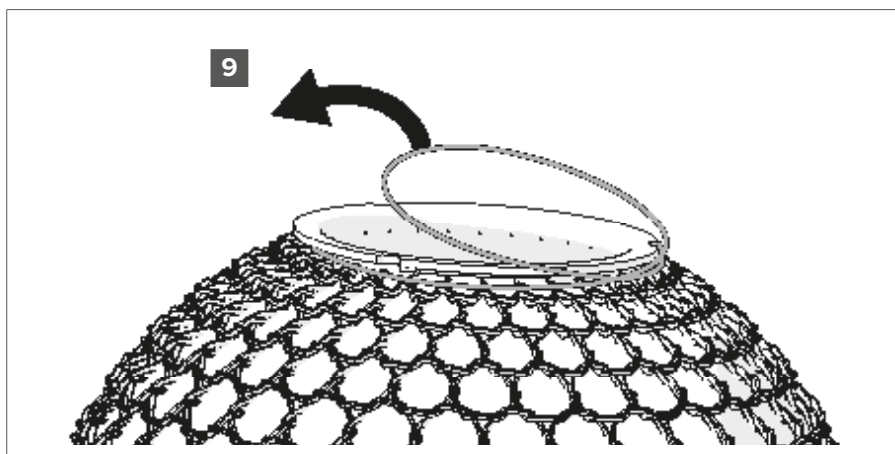

 9. Twist and pull the loop over the rim of the sphere.

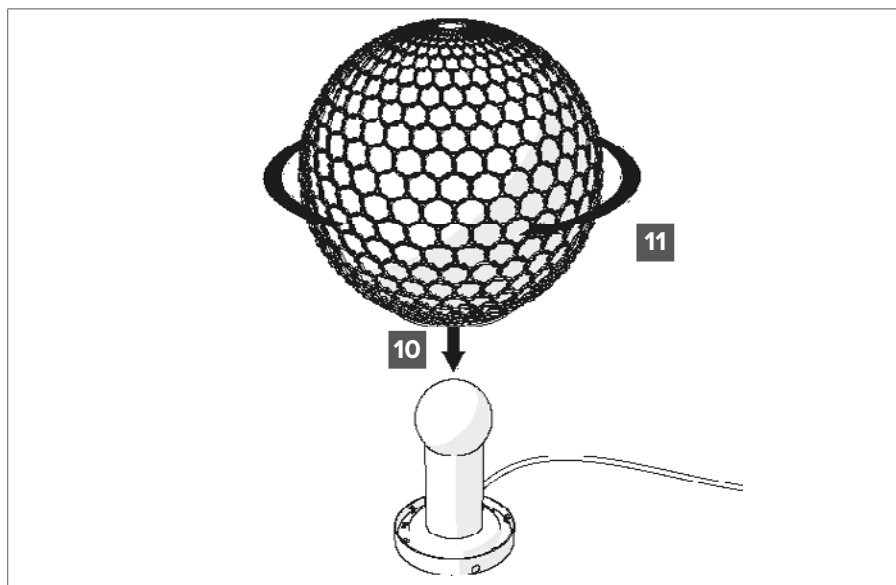

10. Place the sphere in the bayonet catch.
11. Turn the sphere counterclockwise until it is fastened.

## NOTES

---



Produced by:

TRIBÙ  
Oude Heidestraat 72  
3740 Bilzen  
België

[www.tribu.com](http://www.tribu.com)